Collins



STEP 1. Adjust dolly length and place under vehicle's tires until snug before replacing locking pin.











STEP 2. With pry bar in axle pocket, rotate until dolly and vehicle lift off the ground. Repeat on all sides of carrier dolly.



STEP 3. Attach and tighten ratchet tie-down straps to dolly axles and vehicle tires.

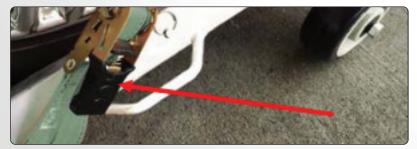



NOTE: TOW BAR HOOKS SHOULD BE PLACED AS NEAR TO THE PERPENDICULAR

Attach winch cable tow hook to front of tow bar STEP 5. without cable slack.

> At this step it is recommended to always attach a secondary safety strap to connect the vehicle to the tow hook when winching for added safety.



Quick-Start Guide Carrier Dolly



STEP 6. If using a single set of dollies, vehicle will need to be in neutral for winching.



STEP 7. Place bed ramps in line with dollies against carrier bed and ready for winching.







For full instructions including unloading, details, safety recommendations and motorcycle loading, please see Carrier Dolly manual here.



When it matters, choose Collins.

Phone: (800) 332-9220 or (541) 774-9220 collinsdollies.com

Collins

Carrier Dolly Sets Specifications

Specs

- High-tensile strength aircraft-grade 6061-T6 aluminum
- 4,000 lb. capacity per dolly pair
- Dolly weight: 25 lbs each
- 64-inch aluminum tow bar
- 3+ inches of additional vehicle clearance
- 6-inch heavy-duty polyurethane wheels with maintenance-free dual-sealed precision bearings
- Maintenance-free self-lubricating pivot points
- 24" bed ramps




Carrier Dolly


Sets

Carrier Dolly System CD-S







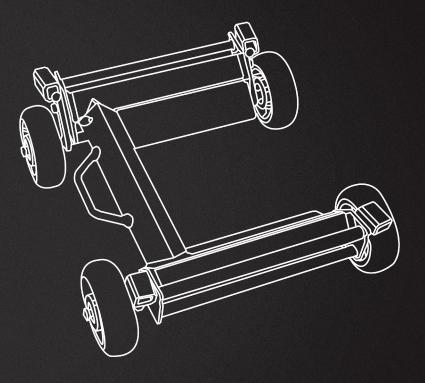

Quick-Start Guide

NOTE: FOR LOADING/LIFTING CARRIER DOLLIES WITH VEHICLE, USE THE PRY BAR END WITHOUT COLLAR STOP. FOR UNLOADING/LOWERING CARRIER DOLLIES, USE PRY BAR END WITH COLLAR STOP.