


COLLINS

Manufacturing Corp

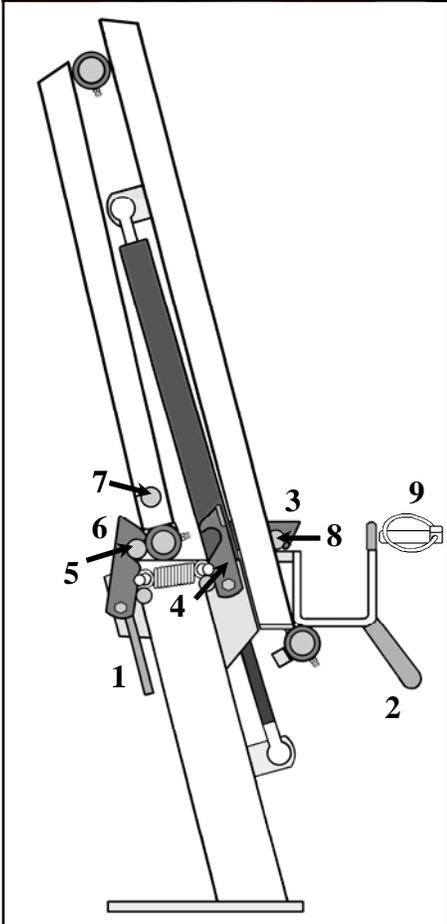

SELF-LOADING DOLLY MOUNT INSTRUCTIONS

UNLOADING SEQUENCE

1. REMOVE LYNCH PIN (9) FROM CHAIN LINKS AND PULL RELEASE HANDLE (1) ON SAFETY LATCH (6) TOWARD OPERATOR.
2. WHILE PULLING RELEASE HANDLE (1), PULL BRACKET HANDLE (2) TOWARD OPERATOR UNTIL LOCK PIN (5) CLEARS SAFETY LATCH (6).
3. CONTINUE PULLING BRACKET HANDLE (2) TOWARD OPERATOR UNTIL LOCKING LATCH (4) ENGAGES LOCKING LATCH PIN (7).
4. RELEASE BRACKET LATCH (3) AND TIP BRACKET TOWARD OPERATOR.

LOADING SEQUENCE

1. TIP BRACKET TO UPRIGHT POSITION UNTIL BRACKET LATCH PIN (8) ENGAGES BRACKET LATCH (3).
2. PULL LOCKING LATCH (4) TOWARD OPERATOR.
3. PUSH UP BRACKET HANDLE (2) UNTIL LOCKING LATCH PIN (7) JUST CLEARS LOCKING LATCH (4).
4. RELEASE LOCKING LATCH (4) AND PUSH BRACKET HANDLE (2) AWAY FROM OPERATOR UNTIL SAFETY LATCH (1) ENGAGES SAFETY LATCH PIN (5) AND REPLACE LYNCH PIN (9) THROUGH CHAIN LINKS.

* NOTES *

- DOLLY MOUNT SHOULD BE POSITIONED THIRTEEN INCHES FROM OUTSIDE OF WRECKER BODY.
- WRECKER BED SHOULD BE REINFORCED UNDERNEATH WITH PLATE OR ANGLE IRON.
- DOLLY MOUNTS SHOULD BE BOLTED, NOT WELDED TO BED.

